PDR–W739 Quick Start Guide

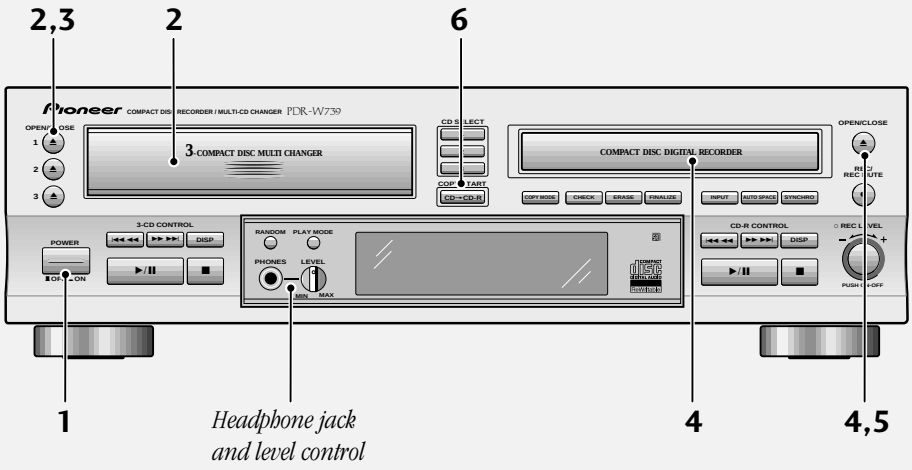

Quick CD copying

If you haven't yet connected the unit to the rest of your system, you may want to plug in a pair of headphones so you can hear the recording. Adjust the volume with the **LEVEL** control.

1 Press POWER to switch on.

2 Press OPEN/CLOSE 1⏏ to eject the 3-CD changer disc tray.

Place the CD you want to copy, with the label face up, on to the disc tray, making sure that it is seated properly in the disc guide.

Note: Do not use an adapter with 8cm CD-singles. The disc tray has guides for both 12cm and 8cm discs.

3 Press OPEN/CLOSE 1⏏ to close the disc tray.

4 Press OPEN/CLOSE ⏏ to eject the CD-R disc tray.

Place a blank CD-R or CD-RW disc, with the label/non-recording side face up, on to the disc tray.

Be careful when handling CD-R and CD-RW discs not to leave fingerprints on the recording surface.

5 Press OPEN/CLOSE ⏏ to close the disc tray.

The recorder reads the disc to see what you've loaded. After a few seconds it should show:

6 Press COPY START CD→CD-R.

The recorder automatically copies at double speed, so if you're listening to the recording as it's being made it will sound a little strange!

After copying, the recorder will finalize the CD-R to make it playable on most ordinary CD players (see *What's finalization* below). This process takes just a couple of minutes after the CD has been copied.

Remove the disc from the recorder before switching off.

What's finalization?

Finalizing a disc means fixing the contents in place by creating what's called a *table of contents*, or TOC for short, at the beginning of the disc. This tells a CD player what's on the disc — the number of tracks and the length of each one. Once a TOC has been recorded onto a CD-R disc, almost any ordinary CD player will play the disc.

It's also possible to finalize CD-RW discs, but even after finalization, most ordinary CD players will *not* play these discs.

PDR–W739 Quick Start Guide

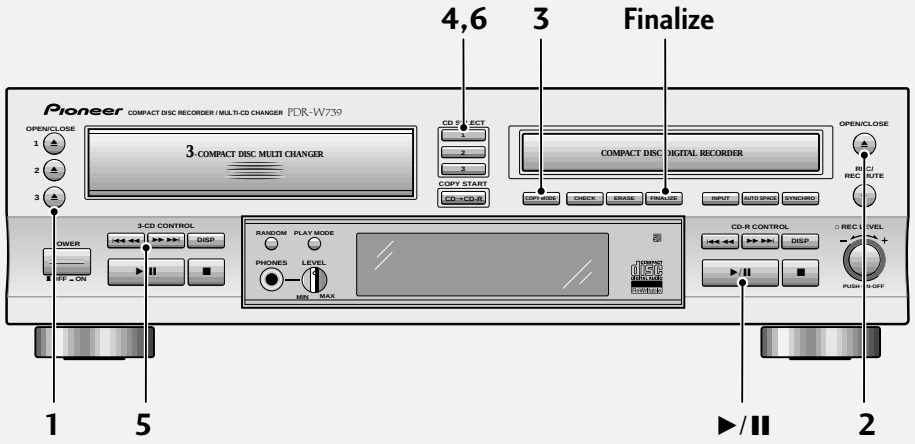

Copying individual tracks

Here's how to copy individual tracks from any disc in the 3-CD changer:

1 Load the CD(s) you want to copy tracks from in to the CD changer.

You can use any of the three disc trays in the changer.

2 Load a blank CD-R or CD-RW into the CD-R tray.

3 Press COPY MODE twice.

4 Press the CD SELECT button for the disc you want to record.

5 Use I◀◀ ◀◀ and ▶▶ ▶▶I (CD changer side) to select the track you want to record.

6 Press COPY START CD→CD-R.

The recorder starts copying the track and stops automatically when it's finished.

- Repeat steps 3 to 6 to copy more tracks.
- See *Finalizing a disc*, opposite, if you want to finalize the disc now.

Finalizing a disc

See *What's finalization?* on the other side of this Quick Start Guide for more information on what finalization does.

1 Press FINALIZE.

- Press ■ (CD-R side) here to cancel finalization.

2 Press ▶/II (CD-R side) to start finalization.

Finalization takes about 2 minutes; you'll see how long there is still to go in the display.

After finalization is complete:

If a CD-R is loaded, the CD-R indicator changes to CD.

If a CD-RW is loaded, the finalize indicator lights in the display.

- None of the controls on the player or the remote have any effect during finalization.

Pioneer

<PRB1303-A>